

MICROH

PROFESSIONAL PRODUCTS
www.microhpro.com



USER MANUAL

LED HALO ZOOM 19 MKII

Keep this manual for future reference.

1. INTRODUCTION AND UNPACKING

Thank you for purchasing the MICROH LED HALO ZOOM19 MKII moving head fixture. For your own safety and knowledge, please read this manual before installing or operating the device. This manual covers the important information on installation and applications. Please install and operate the fixture according to instructions. Meanwhile, please keep this manual for future reference.

The MICROH LED HALO ZOOM19 MKII model is a moving head light with the latest advancements in smart, efficient product design. Combined with the advanced technology of today's stage lighting products, advanced control technology and is very user-friendly; this unit fully complies with CE standards.

The MICROH LED HALO ZOOM19 MKII has a beam angle of 8° to 50°, obtained via motorized zoom control. The LED HALO ZOOM19 MKII has smooth LED dimming, LED rainbow effect using RGBW, 10 built-in Marcos, 14CH and 24CH DMX modes, Neutrik Powercon IN/OUT also has 3 and 5 pin DMX IN/OUT. This fixture is perfect for use in television, banquet and convention centres, nightclubs, large-scale performances and other professional venues. Please carefully unpack the fixture when you receive it and check to see if it was damaged during the transportation. Please check whether the following items are included inside the box:

Fixture – One	Power Cord – One	Power Out Connector – One
User Manual – One	Omega Bracket – One	Safety Cable – One
		DMX Cable - One



2. SAFETY INSTRUCTIONS



This device has been delivered in safe working condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature, and is dry.


This device falls under protection-class I, therefore it is essential that the device be grounded. The electrical connection must be carried out by a qualified technician.

The device should only be used with rated voltage and frequency. Make sure that the available voltage is not higher than 120V as stated at the end of this manual.

Make sure the power cord is never crimped or damaged in any way, as this could cause shock and damage. If your power cord is damaged in any way, please purchase a new cable from your local MICROH dealer. Always disconnect power, when the device is not in use or before cleaning it. Never pull out the plug by tugging the power cord.

During initial start-up, some smoke or smell may arise. This is a normal process, and does not necessarily mean that the device is defective. It should decrease gradually. Please do not project the beam onto combustible substances.

Fixtures cannot be installed on or near combustible substances. Keep more than 3m distance from wall for proper ventilation and air flow. If your fixture is or has become damaged in any way, it shall be exclusively replaced or repaired by the manufacturer to avoid any hazard.

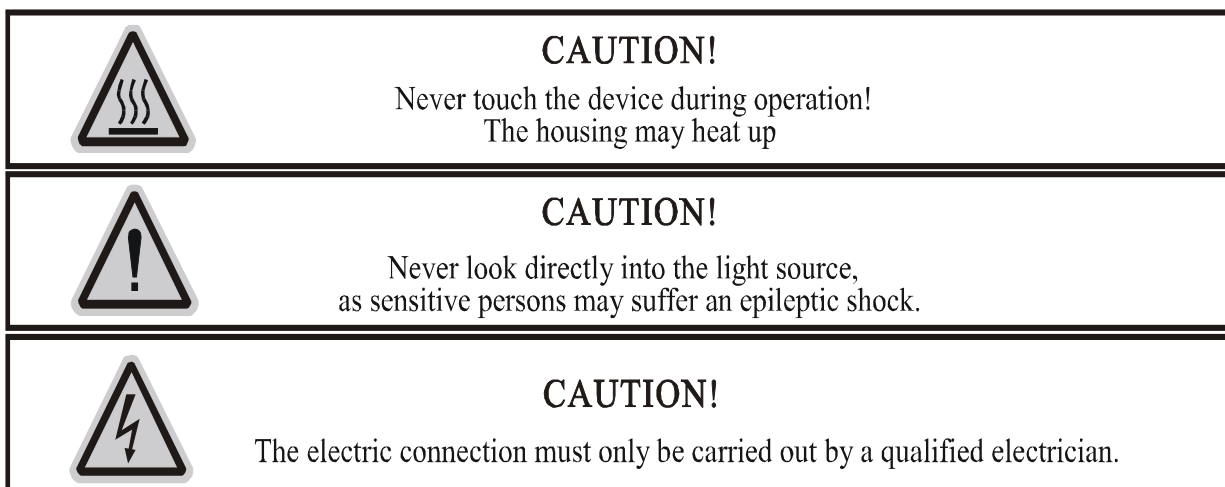

3. MOUNTING AND INSTALLATION

Caution: For added protection, mount the fixtures in areas outside walking paths, seating areas, or in areas where the fixture might be reached by unauthorized personnel. Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight. Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable. Never stand directly below the device when mounting, removing, or servicing the fixture.

Whether installing inverted on a truss, ceiling or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 3m (3.3 ft.) away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Mounting Points: Overhead mounting requires extensive experience, including calculating working load limits. A knowledge of the installation material being used and periodic safety inspection of all installation material and the fixture are all imperative and should only be performed by a qualified technician. Improper installation can result in bodily injury and damage. Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.


Clamp Mounting: The MICROH LED HALO ZOOM19 MKII provides a unique mounting bracket assembly that integrates 2 brackets to be used to mount on a truss or the floor. When mounting this fixture to truss, be sure to secure an appropriately rated clamp to the included bracket fitted through the center hole. As an added safety measure, be sure to attach at least one properly rated safety cable to the fixture.




Regardless of the rigging option you choose for your MICROH LED HALO ZOOM19 MKII, always be sure to secure your fixture with a safety cable. The fixture provides a built-in rigging point for a safety cable on the hanging bracket as illustrated above. Be sure to only use the designated rigging point for the safety cable and never secure a safety cable to a carrying handle.

4. DMX-512 CONTROL CONNECTIONS

This fixture complies with international USITT DMX standards and can be used with either a 3 pin or 5 pin DMX connector. Plug in the provided 3 pin XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the MICROH ULTRA TRINITY 280. To connect the units to DMX, you must daisy chain the fixtures together as referred in the diagram below. Always end your DMX-512 connection with a DMX terminator.

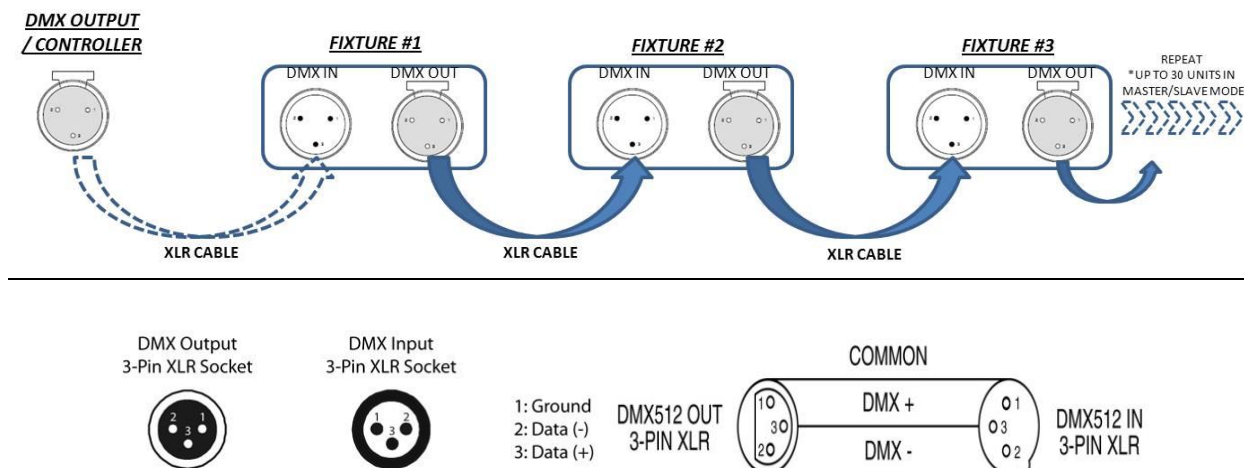

For installations where the DMX cable has to run a long distance, or is in an electrically noisy environment, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

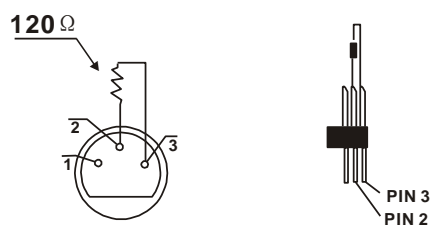

5. SETUP MENU



***Please Note:**

The “Design Mode Set” allows you to re-allocate the position of the said control on your DMX console.

DMX Address Setting	DMX Address: 001 → 512			
Work Mode Setting	Work Mode: DMX512 Slave Sound Fast Slow			
Invert PAN	PAN Reversal: YES NO			
Invert TILT	TILT Reversal: YES NO			
Design Mode Set*	Pan	PANMICO	TILT	TILTMICO
	001 → 024	001 → 024	001 → 024	001 → 024
	SPEED	FOCUS	DIM	STROBE
	001 → 024	001 → 024	001 → 024	001 → 024
	DIM_R0	DIM_G0	DIM_B0	DIM_W0
	001 → 024	001 → 024	001 → 024	001 → 024
	DIM_R1	DIM_G1	DIM_B1	DIM_W1
	001 → 024	001 → 024	001 → 024	001 → 024
	DIM_R2	DIM_G2	DIM_B2	DIM_W2
	001 → 024	001 → 024	001 → 024	001 → 024
	LIGHT EFFECT	LIGHT SPEED	MACRO_CH	RESET_CH
	001 → 024	001 → 024	001 → 024	001 → 024
DISPLAY SET	BACKLIGHT: YES NO			
CHANNEL MODE SET	CHANNEL MODE: 14 CHANNEL 24 CHANNEL DESIGN MODE			
RESTORE FACTORY	LOAD DEFAULT YES			
RESET	RESET ALL YES			

6. DMX CHANNEL MODES (14 / 24)

14 Channel Mode:

Channel	Function	Value	Description
1	Pan	0 - 255	Pan
2	Tilt	0 - 255	Tilt
3	Speed	0 - 255	Speed control of Pan/Tilt (Fast to Slow)
4	Zoom	0 - 255	0 - 100% Linear Zoom
5	Dimmer	0 - 255	0 - 100% Linear Dimmer (Dark to Light)
6	Strobe	0 - 255	Strobe (Slow to Fast)
7	Red	0 - 255	0 - 100% Red dimmer (Dark to Bright)
8	Green	0 - 255	0 - 100% Green dimmer (Dark to Bright)
9	Blue	0 - 255	0 - 100% Blue dimmer (Dark to Bright)
10	White	0 - 255	0 - 100% White dimmer (Dark to Bright)
11	Colour Macro	0 - 174	Random Colour Change
		175 - 199	Colour Chase
		200 - 255	Colour Fade
12	Macro Speed	0 - 255	Macro Speed (Fast to Slow)
13	Macro	0 - 49	No Function
		50 - 99	CH11 & CH12 Enable
		100 - 149	Auto 1
		150 - 199	Auto 2
		200 - 255	Auto 3
14	Reset	0 - 250	No Function
		251 - 255	Factory Reset

24 Channel Mode:

Channel	Function	Value	Description
1	Pan	0 - 255	Pan
2	Fine Pan	0 - 255	Fine control of Pan
3	Tilt	0 - 255	Tilt
4	Fine Tilt	0 - 255	Fine control of Tilt
5	Speed	0 - 255	Speed control of Pan/Tilt (Fast to Slow)
6	Zoom	0 - 255	0 - 100% Linear Zoom
7	Dimmer	0 - 255	0 - 100% Linear Dimmer (Dark to Light)
8	Strobe	0 - 255	Strobe (Slow to Fast)
9	Red 1	0 - 255	0 - 100% Red 1 dimmer (Dark to Bright)
10	Green 1	0 - 255	0 - 100% Green 1 dimmer (Dark to Bright)
11	Blue 1	0 - 255	0 - 100% Blue 1 dimmer (Dark to Bright)
12	White 1	0 - 255	0 - 100% White 1 dimmer (Dark to Bright)
13	Red 2	0 - 255	0 - 100% Red 2 dimmer (Dark to Bright)
14	Green 2	0 - 255	0 - 100% Green 2 dimmer (Dark to Bright)
15	Blue 2	0 - 255	0 - 100% Blue 2 dimmer (Dark to Bright)
16	White 2	0 - 255	0 - 100% White 2 dimmer (Dark to Bright)
17	Red 3	0 - 255	0 - 100% Red 3 dimmer (Dark to Bright)
18	Green 3	0 - 255	0 - 100% Green 3 dimmer (Dark to Bright)
19	Blue 3	0 - 255	0 - 100% Blue 3 dimmer (Dark to Bright)
20	White 3	0 - 255	0 - 100% White 3 dimmer (Dark to Bright)
21	Colour Macro	0 - 174	Clour Change
		175 - 199	Colour Chase
		200 - 255	Colour Fade
22	Macro Speed	0 - 255	CH21 Macro Speed (Fast to Slow)
23	Macro	0 - 49	No Function
		50 - 99	CH21 & CH22 Enable
		100 - 149	Auto 1
		150 - 199	Auto 2
		200 - 255	Auto 3
24	Reset	0 - 250	No Function
		251 - 255	Factory Reset

7. TECHNICAL SPECIFICATIONS

Power: 110~240V 295W

Frequency: 50/60Hz

LED's: 19 x 15W OSRAM LE RTDUW S2W 4-in-1 LED's

Fuse: 6A250V

Fixture Dimension: 185 x 310 x 400mm (7.28"x12.2"x15.75")

Packing Dimensions: 290 x 356 x 430mm (11.4"x14"x17")

Net Weight: 7.8Kg (17.2Lbs)


Gross Weight: 9.3Kg (20.5Lbs)

8. MAINTENANCE AND CLEANING

The following points have to be considered during the inspection:

- 1) All screws for installing the device or parts of the device must be tightly connected, and must not be corroded.
- 2) There must not be any deformations on the housing, colour lenses, fixations or installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage must be handled by a skilled installer or technician. Any safety issues must be resolved.

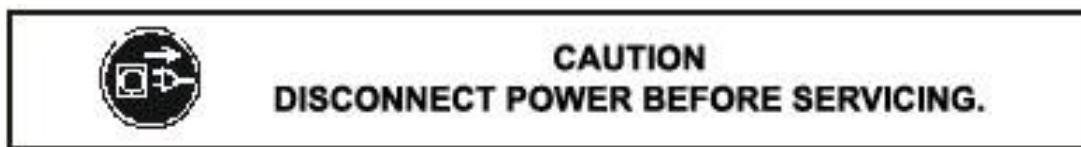

In order to keep the fixture in good condition and extend the life, we suggest regular cleaning to the fixture.

- 1) Clean the inside and outside lens each week to avoid the light output from darkening due to accumulation of dust, dirt, etc.
- 2) Clean the fan each week.
- 3) A detailed electrical check by approved technician every three months is advised. Ensure the circuit contacts are in good condition.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.

There are no serviceable parts inside the device. Please refer to the instructions under “Installation instructions”.

Should you need any spare parts, please order genuine MICROH parts from your local dealer.

IF YOU SHOULD EXPERIENCE ANY PROBLEMS OR ISSUES PLEASE CONTACT MICROH PROFESSIONAL PRODUCTS BY EMAIL AT info@microhpro.com

In the event that your unit is defective in any way, please contact your local dealer to obtain an RA number for service repair.

DISCLAIMER – MICROH believes that the information contained within this user manual is accurate. However, MICROH is not responsible for any error or addendums to this manual. If you have any comments or general suggestions on how this manual can be improved please contact info@microhpro.com. Thank you.

MICROH
PROFESSIONAL PRODUCTS
www.microhpro.com